

UNPACKING INSTRUCTIONS ON OTHER SIDE


THIEL CS3.5 REPACKING INSTRUCTIONS

If it is necessary to repack the speakers, it must be done properly to avoid damage during shipping.

1. Unmount trim strip on front of speaker. Remove grille frame by pulling its bottom away from the cabinet about a half-inch and then lifting it upward (reverse order of the installation illustrated on the other side). Reinstall trim strip.
2. Tape orange tweeter protector cap over tweeter and cover speaker with plastic bag if available.
3. Place empty carton over speaker and insert the two long cardboard corners at back of speaker. Lay speaker (in carton) on its back.
4. Mount grille to large plywood piece by inserting grille bottom edge into slot in foam and grille plastic fasteners into holes near top. Insert plywood (with grille mounted), with narrow side of grille first, from top of carton. It is helpful to have a second person who can guide this piece from the bottom of speaker over the trim strip and into proper position with foam against speaker front.
5. Install bottom plywood and cardboard pad assembly into bottom of carton so that the cardboard blocks run side to side. Close all four carton flaps and tape or staple securely.

6. Stand speaker upright and install the top plywood and foam pad assembly making sure that speaker is held toward back of carton by lip on the foam and that the front plywood piece is outside of foam lip on bottom of top plywood piece. Isn't this confusing? See illustration.

7. Close all four top cardboard flaps and tape or staple securely.

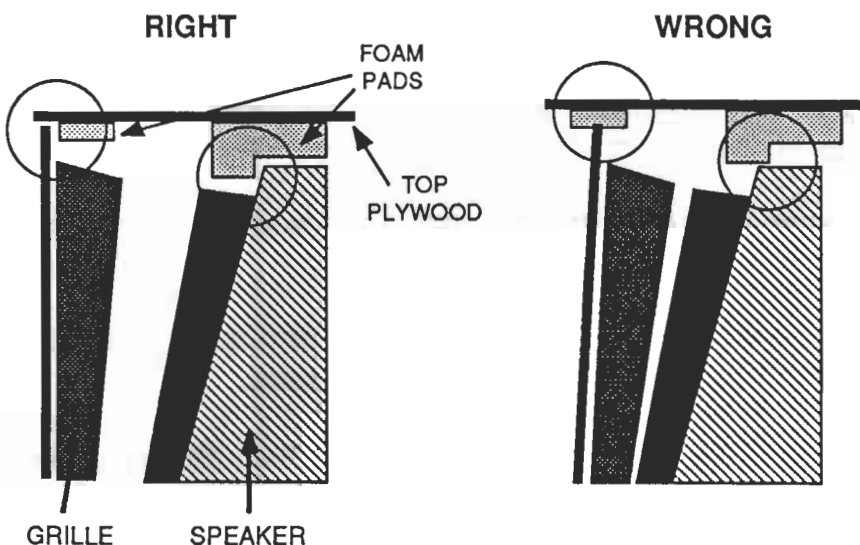


IMPORTANT

THIEL CS3.5 UNPACKING AND GRILLE INSTALLATION INSTRUCTIONS

UNPACKING THE SPEAKER

1. Remove the top plywood and pad assembly.
2. Remove the two cardboard corner pads from back of cabinet.
3. Carefully lift up and remove the front plywood piece with grille attached. *Hold the cabinet toward back of carton to avoid catching the foam pads on the trim strip.* (see figure)
4. Lay the speaker (in carton) on its back. Open the bottom of the carton and fold all four carton flaps out. It will be necessary to lift the bottom of the carton off the floor to fold the bottom flap out.
5. Remove the bottom plywood and pad assembly.
6. Stand the speaker upright and lift the carton off the speaker.
7. Remove the plastic bag and the orange tweeter protector cap.

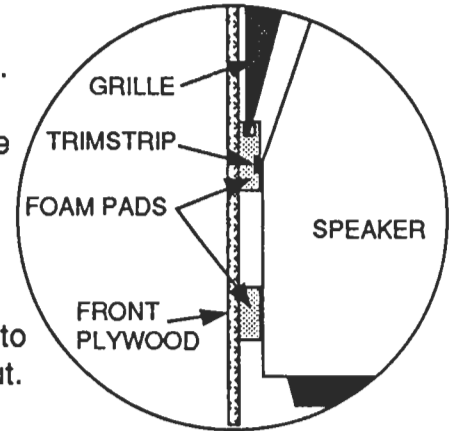


INSTALLING THE GRILLE

In order to better protect the speaker and guard against shipping damage the grille is removed from the speaker during shipping.

Before the grille is installed, make sure the tweeter protector cap is removed.

1. Remove the grille from the packing plywood by lifting it up and then out.
2. Unmount the black trim strip on the front of the speaker (below the baffle) by removing the two phillips screws.
3. Mount the grille by first pushing its top down into the fasteners on top of the baffle so that the grille top is flush with the cabinet top. Then push the bottom of the grille back against the speaker so that the pins in the bottom of the baffle seat into the holes in the grille.
4. Remount the black trim strip to the front of the speaker.

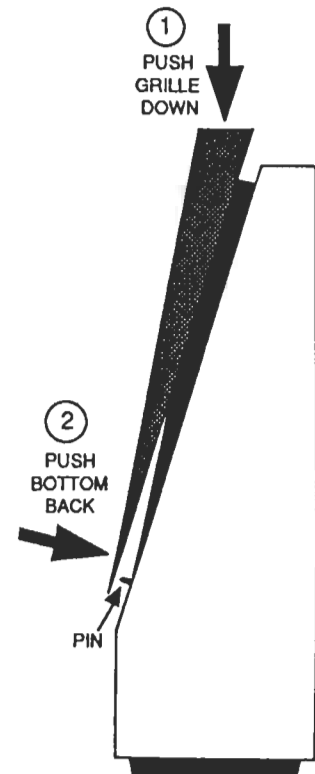

PLEASE SEE OWNER INFORMATION PACKED WITH EQUALIZER