
THIEL

Ultimate Performance Loudspeakers

1026 Nandino Boulevard
Lexington, Kentucky 40511, USA
Telephone: 859-254-9427
Fax: 859-254-0075
E-mail: mail@thielaudio.com
Web: www.thielaudio.com

THIEL CS1.6 Outrigger Installation Instructions

The THIEL CS1.6 Outriggers attach to the bottom of the speaker cabinets with four mounting bolts screwed into the four threaded openings normally used for the stabilizer feet. *Use the 4 gold stabilizer feet shipped with the CS1.6 speaker for use as the feet of the outrigger.*



STEP ONE

Lay the speaker on its back. Remove the four plastic caps from each of the four holes located in the corners of the speaker's base. You can use a knife or other flat blade tool to help remove, or if the gold stabilizer feet are already installed, remove them.



STEP TWO

Attach each of the two outriggers to the base using the mounting bolts provided in the kit. The legs of the outrigger should face away from the speaker with the more perpendicular leg at the front of the speaker. Use the $\frac{3}{16}$ -inch wrench to secure the bolts tightly.



STEP THREE

Screw each the 4 stabilizer feet provided with the CS1.6 speakers (without the lock nuts) into the bottom of the four Outrigger legs. Then place the speaker upright and adjust the height of each foot so that the speaker stands firmly on the floor without wobbling. After adjusting the height, screw the threaded gold caps (provided with the Outrigger) onto the stabilizer feet threads from above to lock the feet.



Kit Contents

- (4) Outriggers
- (8) mounting bolts
- (8) gold caps
- (1) $\frac{3}{16}$ -inch wrench