

THIEL Outrigger Installation Instructions

THIEL Outriggers attach to the bottom of the speaker cabinets with four mounting bolts screwed into the four threaded openings normally used for the stabilizer feet. *Use the 4 gold stabilizer feet shipped with the speaker for use as the feet of the outriggers.*



STEP ONE

Lay the speaker on its back. On some models it is necessary to remove the four plastic caps from each of the four holes located in the corners of the speaker's base. You can use a knife or other flat blade tool to help remove, or if the gold stabilizer feet are already installed, remove them.



STEP TWO

Attach each of the two outriggers to the base using the mounting bolts provided in the kit. The legs of the outrigger should face away from the speaker with the more perpendicular leg at the front of the speaker. Use the included $\frac{3}{16}$ -inch wrench to secure the bolts tightly.



STEP THREE

Screw each the 4 stabilizer feet provided with the speakers (without the lock nuts) into the bottom of the four Outrigger legs. Then place the speaker upright and adjust the height of each foot so that the speaker stands firmly on the floor without wobbling. After adjusting the height, screw the threaded gold caps (provided with the Outrigger) onto the stabilizer feet threads from above to lock the feet.



Kit Contents

- (4) Outriggers
- (8) mounting bolts
- (8) gold caps
- (1) $\frac{3}{16}$ -inch wrench

Questions? Contact THIEL's service department via email at service@thielaudio.com or call 859-254-9247 M-F, 8:30 am- 5:00 pm ET.